

Pontoon Boat Rental Guide




1) Boat lift

- a. Boat is on an electric lift. Use switch to raise or lower boat. Please be sure to raise boat up out of water when not using otherwise waves can have it float away. Raise until metal bar is slightly out of the water.



Metal bar raise
slightly out of water

- b. DO NOT LIFT TOO HIGH. Please see picture below, the bimini can be crushed by the lift on the metal shelf that hold the battery. Once the bimini bar is an inch from the battery please stop.

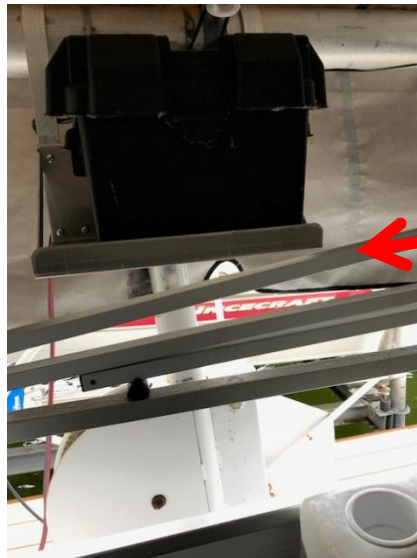

WATCH OUT for
bimini bar

- c. When lowering the boat be sure to continue to lower the boat for a minute even after it freely floats. There are 2 wooden planks that hold the boat and if too close to the top you may hit them when bringing in the boat.

2) Using the boat

- a. Only start the boat once lowered into the water. Make sure throttle is in the neutral position or boat will not start. Turn key and it should start immediately.

- b. There is a master power switch on the far right of the console. This does not need to be on to run the boat but does need to be switched to use boat lights, radio, etc.



- c. GO SLOWLY into and out of the boat lift. The boat is easy to bring in by hand pulling on the top bars and will prevent damage to the boat of lift.
- d. If using the Bimini ALWAYS LOWER it before docking back in the boat lift to prevent damaging it
- e. Always TURN OFF all switches and master power when done using the boat.

3) ACCESSORIES

- a. 12 adult life vests are found spread out under the seats. There are a few kids ones as well. 12 person max on the boat.
- b. Fire extinguisher is located under the front left seat.
- c. 2 anchors are located under the front left seat
- d. 2 black dock lines are located under the front right seat

Enjoy and call or text if you have any questions or issues!

Brian 262-385-4104